


NOTES:

1. IF SEWER LATERAL IS DAMAGED OR HAS TO BE RELOCATED DURING CONSTRUCTION, RELOCATE/REPAIR SEWER PIPE AND RECONNECT USING A FERNCO RC SERIES STRONGBACK COUPLING OR ROMAC COUPLING.
2. A CONCRETE/PVC ADAPTER SHALL BE USED TO CONNECT PVC TO CONCRETE.
3. INSPECTION OF WORK IS REQUIRED AND MUST BE APPROVED BY THE ENGINEERING DEPARTMENT.
4. BORING OF SERVICES WITHIN RIGHT OF WAY IS NOT ALLOWED.
5. SEWER PIPE SHALL BE SDR-35 AND JOINTS SHALL BE GASKETED.

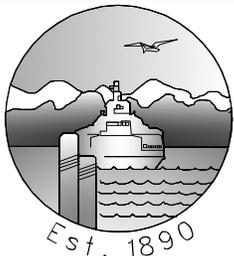

CITY OF EDMONDS
PUBLIC WORKS
DEPARTMENT

**SIDE SEWER
RELOCATION/REPAIR**

APPROVED BY: **R. ENGLISH**

REVISION DATE
JANUARY 2018

STANDARD
DETAIL
SS-201