


NOTES:

1. ALL ROOT PRUNING SHALL BE PERFORMED PER THE STANDARDS OF ANSI A300.
2. ALL ROOTS OVER 1" IN DIAMETER THAT HAVE BEEN EXPOSED AND DAMAGED DURING CONSTRUCTION ACTIVITIES SHALL BE REMOVED. MAKE A CLEAN, STRAIGHT CUT TO REMOVE ENTIRE DAMAGED PORTION OF ROOT.
3. ALL EXPOSED ROOTS SHALL BE TEMPORARILY COVERED WITH DAMP BURLAP TO PREVENT DRYING AND DAMAGE.
4. ROOT BARRIER SHALL BE A MINIMUM OF 18" DEEP AND SHALL BE MADE OF BIO-BARRIER TRIFLURALIN, AS ROOT CONTROL CHEMICAL OR APPROVED EQUAL. SET 1/2" BELOW FINISHED GRADE. CENTER ROOT BARRIER ON TRUNK OF TREE.
5. DISTANCE BETWEEN TREE AND ROOT BARRIER TO BE DETERMINED BY ARBORIST. MINIMUM DISTANCE IS 3 TIMES THE TRUNK CALIPER. GAP BETWEEN ROOTS AND ROOT BARRIER ALSO TO BE DETERMINED BY ARBORIST.

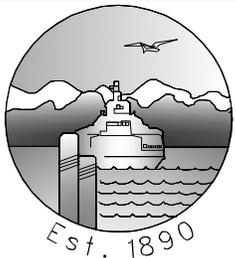

CITY OF EDMONDS
PUBLIC WORKS
DEPARTMENT

**ROOT BARRIER FOR
CONCRETE/PAVED
WALKWAY**

APPROVED BY: **R. ENGLISH**

REVISION DATE
JANUARY 2018

STANDARD
DETAIL
TR-550